

Assembly Instructions
Streamline Seats
Model "Curb"
(Lambretta V Special)



Scope of supply

- 1 x upholstered seat
- 3 x allen bolt M6x12
- 3 x washer for M6
- 2 x plastic spacer, thick
- 1 x plastic spacer, thin




INSTALLATION

Step 1:

Remove the old seat and the rear metal plate under the plastic cover.

Step 2:

Attach the seat to the hinge with the M6x12 allen bolts and the M6 washers.

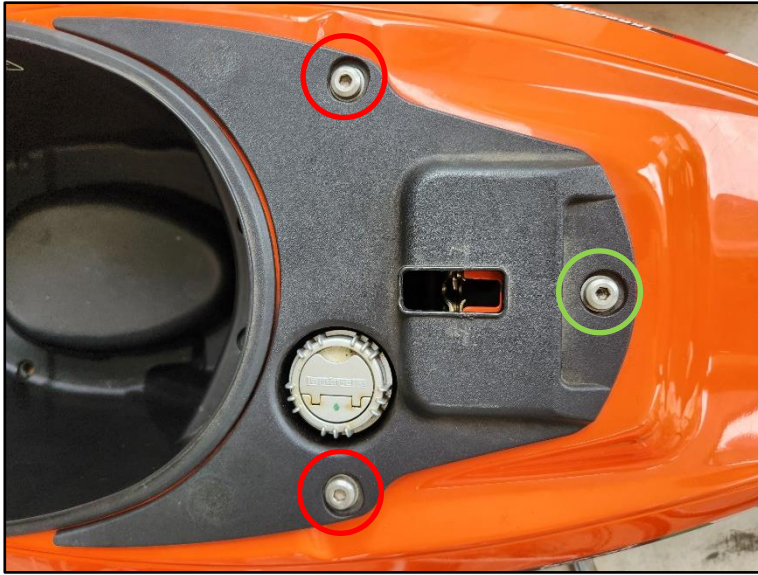

Step 3:

Place the two thick plastic spacers on the left and right side of the rear plastic cover (red marking) and the thin spacer at the back (green marking). Screw in the original screws

Step 4: Close the seat and check if the rear catch snaps into the locking mechanism. If necessary, adjust the position of the rear catch with the help of the elongated holes.

No warranty is given on damages or subsequent damages that were caused by an improper installation.
Due to legal reasons for decoration purposes only.