

Assembly Instructions


Streamline Seats

Model „Grid short” and „Grid long”
(Royal Alloy)



Scope of supply

- 1 x upholstered seat
- 1 x metal bracket
- 2 x Spacer D=20 mm / H=21 mm
- 1 x Spacer D=15 mm / H=22 mm
- 2 x Spacer with collar D=12 mm / H=23 mm
- 2 x oval frame protectors
- 2 x oval adhesive pads
- 5 x pan-head allen bolt with flange M8x40
- 6 x washer for M8

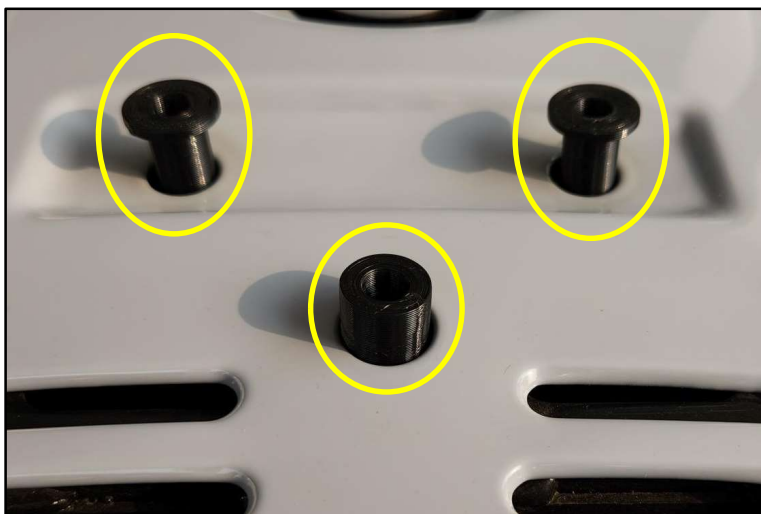

Montage


Step 1: Remove the old seat including the rear pillion cushion.

For the long seat version, the rear luggage rack must also be removed.

Step 2: Insert the two spacers with collar and the spacer with 15 mm diameter into the rear frame recesses as shown in the picture on the left.




Step 3: Screw the black metal bracket to the three spacers using three M8x40 Allen pan-head screws with flange.

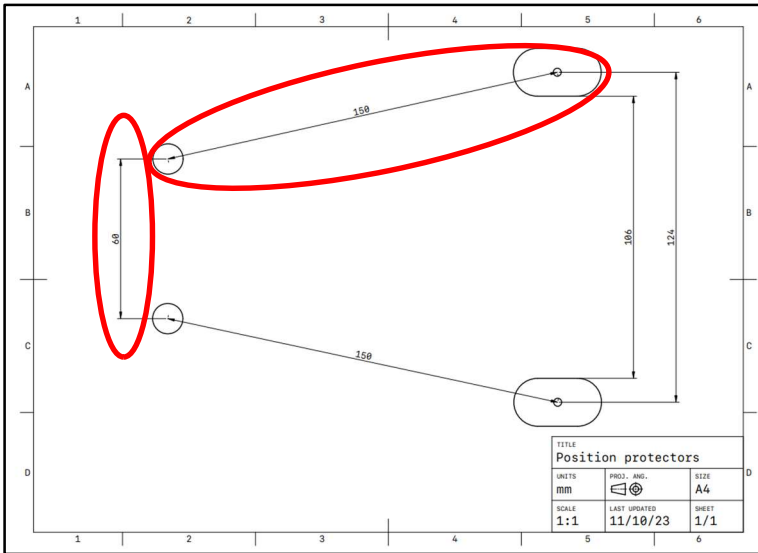


Step 4: Print out the template for positioning the frame protectors at a 1:1 scale and use a ruler to verify that the dimensions provided are accurate.




Step 5: Insert the two 20 mm diameter spacers into the two front frame recesses and screw tight with the M8x40 screws.

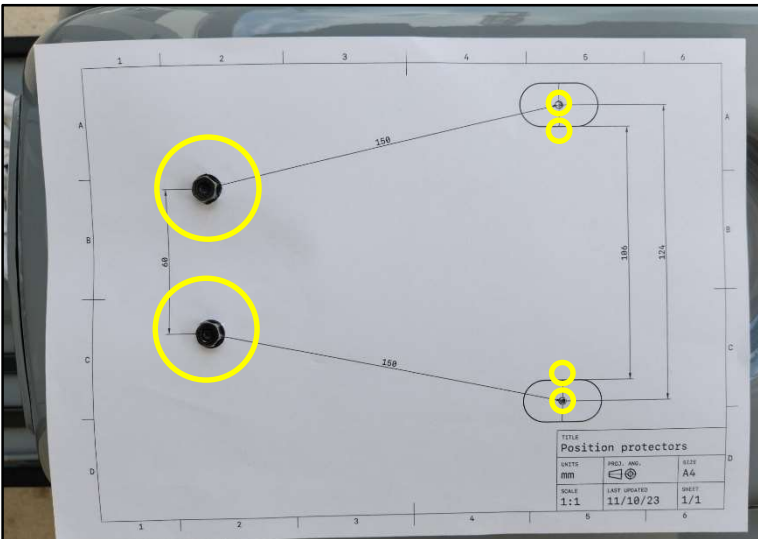

Step 6: Cut out the two front circles of the printed template. Also make four small holes in the sheet at the position of the protectors.

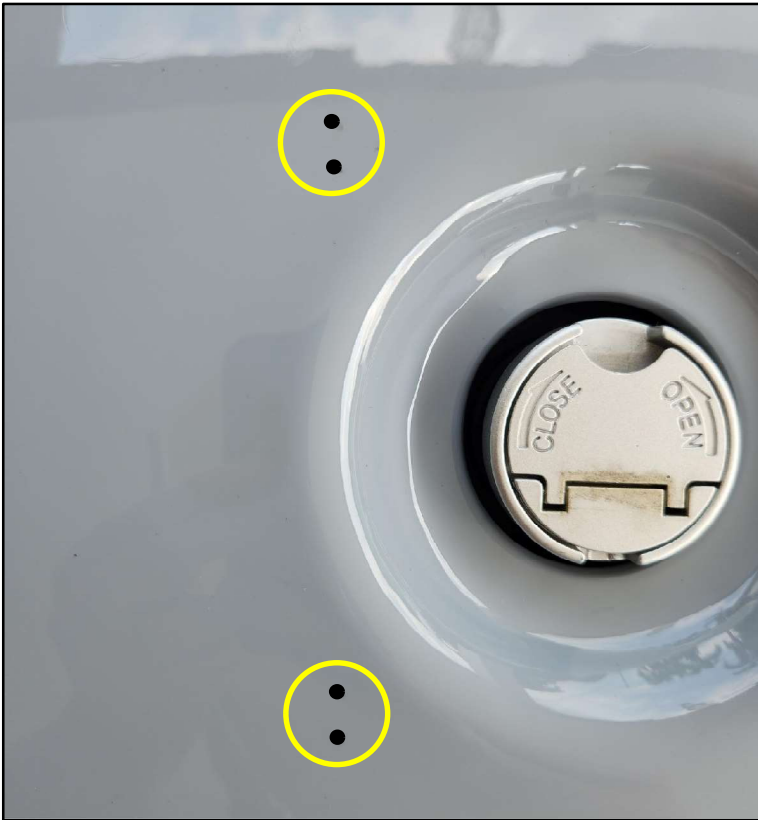

Step 7: Place the template over the two front screws and mark the four position points on the frame with a pencil.

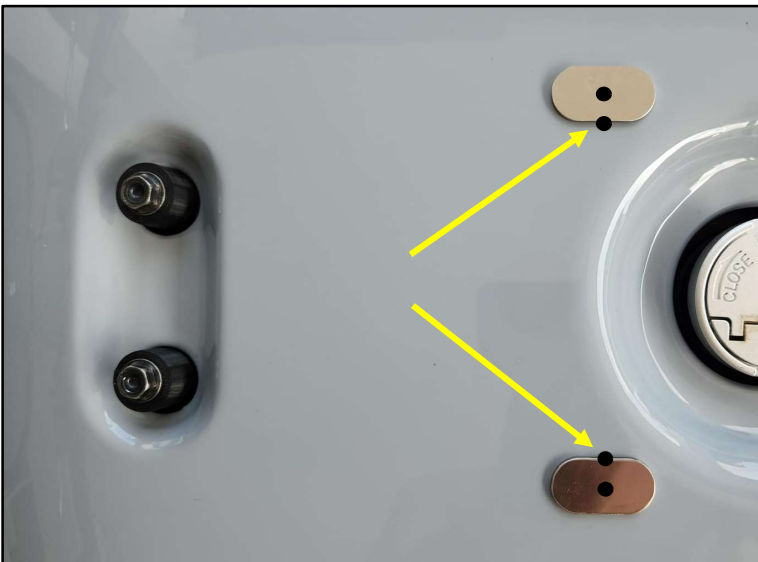

Step 8: Stick the adhesive pads onto the oval frame protectors and stick them onto the center of the frame over the inner marked points.



Step 9: Screw the seat to the frame using the two M8x40 Allen pan-head screws with flange.

Step 10: Close the seat and test whether the seat is held in place by the magnets. If necessary, adjust the height of the rear metal plate accordingly using the 8 washers supplied.

No warranty for damage or consequential damage caused by improper installation. For legal reasons, use only for decorative purposes.