


Assembly instruction

Spare wheel bracket for 8 und 10 inch wheels

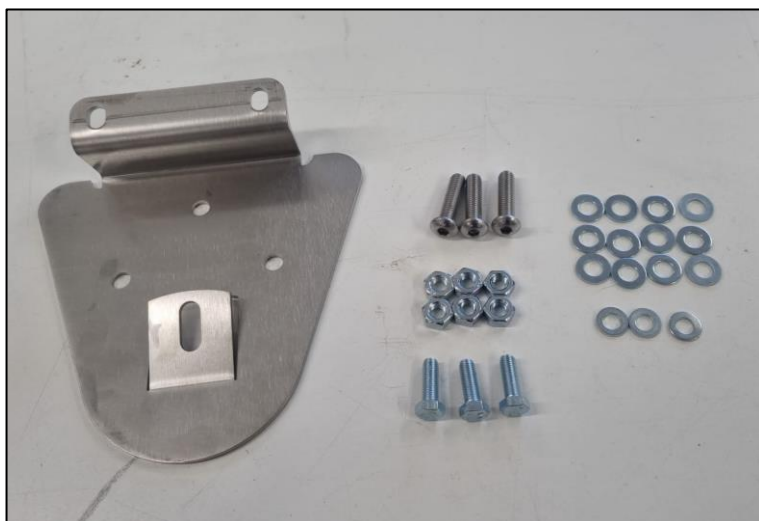

CONTENTS

- 1 x spare wheel bracket
- 3 x flat-head allen bolt M8x30
- 12 x washer for M8
- 6 x nut M8
- 3 x hexagon bolt M7x20
- 3 x washer for M7



Assembly

Step 1: Put the three M8x30 flat-head allen bolts together with three washers through the backside of the spare wheel bracket.



Step 2: Fasten the bolts from the other side with three washers and three M8 nuts.



Step 3: Mount the spare wheel bracket to the frame of the Vespa with the three M7x20 bolts and washers.



Step 4: Place three washers on the bolts and place the spare wheel on the bracket. Fix the wheel to the bracket with three washer and three M8 nuts.

No warranty is given on damages or subsequent damages that were caused by an improper installation.
Due to legal reasons for decoration purposes only.